


GCP-5300 / GCP-6300 Gutter Clean Pro Instructions

BEFORE INSTALLATION

Clean and flush existing gutters and downspouts.

INSTALLATION

- Place the Gutter Clean Pro on top of the gutter, securing the front grip onto the front edge of the gutter. Ensure the flexible vinyl strip is facing the fascia.
 - If necessary, apply light side pressure to snap the front in place. Never hit or force downward, as this could damage both the product and the gutter.
- 2. If necessary, use the removable flexible vinyl strips for a better fit.
- 3. Fasten the front part every 24" (61 cm) using #6 $^{3}/_{8}$ " screws.
- **4.** There are two possible installation methods:
 - A) Insert each piece under the other so that they overlap perfectly, leaving no visible gap. If the gutter is slightly uneven due to hangers or nails installed at different heights, add two #6 %" screws at the overlap to ensure a clean and straight finish.
 - **B)** Alternatively, connect the pieces using a scissor-like interlocking motion, ensuring the flexible vinyl strips are fully joined without any spaces between them.
- **5.** At the end cap, cut the Gutter Clean Pro straight. Stop the section inside the end cap to avoid overflow. Do not install the Gutter Clean Pro directly on top of the end cap.
- 6. Cut a hole into the Gutter Clean Pro where the downspout connecting to the upper gutter touches the surface. Secure the two layers of the product together with four #6 3/8" screws before cutting the hole. Seal the outer edge of the downspout with sealant.

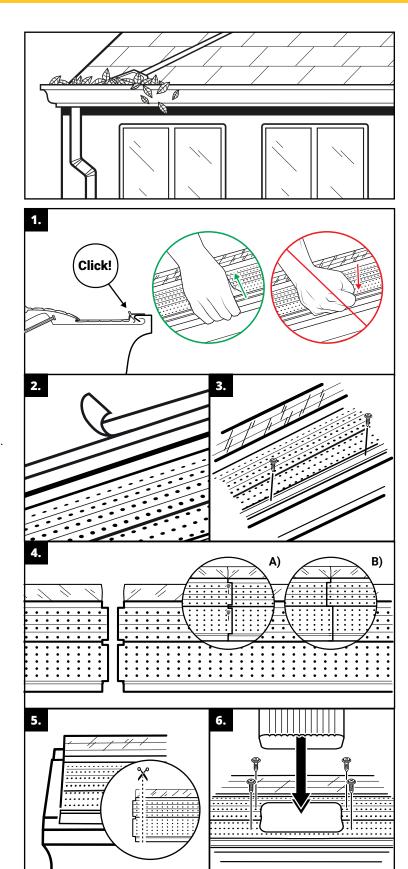

IMPORTANT

If, when cutting the Gutter Clean Pro, the two membranes come apart (EX: if the bottom one unclips), simply add two #6 3/8" screws to secure them back together.


CORNER


TIP: We strongly recommend using a miter saw for faster, cleaner cuts.

- 1. Cut two sections at a 45-degree angle using a miter saw, as shown. If you are using snips, please refer to the steps on the right.
- 2. Insert a flexible vinyl strip (included in the box) between the two Gutter Clean Pro pieces at the corner and fasten it with four #6 %" screws. This will securely connect the sections and act as a seal to prevent debris and water from getting through the joint.
- 3. Fasten the front of the Gutter Clean Pro using four #6 3/4" screws.

CUTTING WITH SNIPS

Cut the front section in three places at a 90-degree angle as shown below (A), then use your hands to separate the section along the cuts. Next, cut the middle section at a 45-degree angle (B). Finally, cut the back in three steps at a 90-degree angle (C): the vinyl strip and the two back notches.

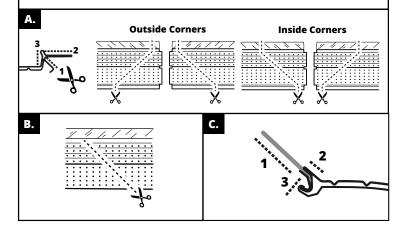

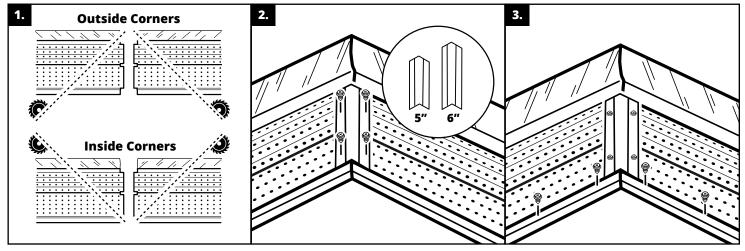

SPLASH GUARD

- 1. For inside corners and valleys, install a water diverter right on the perforated section of the Gutter Clean Pro corner.
- 2. Secure the splash guard using four #6 3/8" screws.

More instructions in the accessory guide.

